

## Heart Rate Troubleshooting

<i>Symptom</i>	<i>Possible Cause</i>	<i>Test Procedure</i>	<i>Repair</i>
<i>Erratic or no heart rate. (Hand grips on or separate from console)</i>	<i>User Error</i>	<b>(Reference Proper Heart Rate Usage section.)</b>	
	<i>Failed heart rate grips.</i>	<b>(Reference Proper Heart Rate Usage section.)</b>	<i>If there is absolutely no heart response, replace heart rate grips.</i>
	<i>Failed console.</i>	<b>(Reference Proper Heart Rate Usage section.)</b>	<i>If proper heart rate instructions are followed and heart rate continues to be erratic, replace console.</i>
<i>Heart rate erratic or no heart rate function. (Telemetric chest strap)</i>	<i>User error.</i>	<b>(Reference Proper Heart Rate Usage section.)</b>	
	<i>Electromagnetic interference.</i>	<i>Check immediate area for causes of interference (Fluorescent lighting, electric dog fences, large electric motors, etc.)</i>	
	<i>Failed telemetric chest strap or polar receiver.</i>	<b>(Reference Proper Heart Rate Usage section.)</b>	<i>Replace chest strap and/or polar receiver. (Reference Proper Heart Rate Usage section.)</i>